



Ray's Cabinet Shop

Custom Made Since 1949

Product Adjustments

Door Adjustments

Over time and with use, you may find that your doors may become misaligned. To correct this, you will need a Phillips screwdriver. The adjustment screws are located within the hinges. Determine first whether you need to adjust the door up or down, left or right, or in or out. There are adjustment screws for the three directions. Next determine the type of doors overlay that are on your cabinets as the hinges for each overlay look slightly different. Full overlay has the door covering the cabinet frame leaving 1/8" reveal on the sides and is flush with the bottom. Inset has the door seated within the opening of the cabinet frame. Click on the appropriate link for hinge adjustment instructions: [Full Overlay](#), [Inset](#)

Soft Close Hinge Adjustment

Each door has a soft close hinge. To turn the soft close action off or on, push the small triangle shaped, plastic sliding button to the opposite position and close the door.

Drawer Front and Drawer Box Adjustment

If your drawer box becomes tilted or misaligned, this can be easily corrected with the tool-less adjustment, which can be found on the underside of the drawer box. Pull open the drawer and simply rotate the wheel at the front bottom of the drawer to adjust the drawer box left and right. To move the drawer front up and down, use the lever also located at the front bottom by pushing it forward and back. [Side to Side](#), [Up and Down](#)

To remove a drawer from the cabinet, pull open the drawer and simply press outward the two front release devices found on the underside of the drawer box. Then slide the drawer toward you while lifting up the drawer.